
# GALAXY AUTO MODEL: 3100BX-EH

## PROFESSIONAL 12 GALLON AUTOMOTIVE DETAILER

OWNER'S/OPERATOR'S MANUAL



PROUDLY DESIGNED AND MANUFACTURED BY

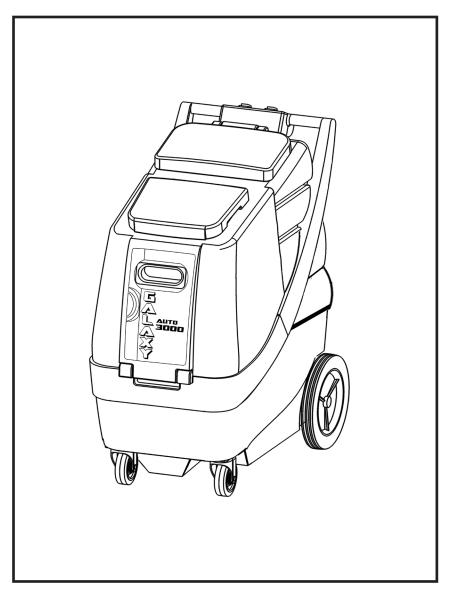







WWW.EDIC-USA.COM

Revised 1-25-18



## TABLE OF CONTENTS

RECEIVING YOUR EQUIPMENT	3
WARNINGS AND SAFETY	
ELECTRICAL INFORMATION	4
GROUNDING INSTRUCTIONS	4
MAINTENANCE	5
CORD STORAGE AND SAFETY	5
MACHINE LAYOUT	6
HEATER LAYOUT	7
HOW TO USE AN ACCESSORY HEATER	8
CLEANING CARPET	9
CLEANING UPHOLSTERY	9
TROUBLESHOOTING	10
WIRING	11
BREAKDOWN UPPER	12, 13
BREAKDOWN BASE	14, 15
WARRANTY INFO	16, 17



UNPACKING YOUR NEW 3100BX-EH: When your package is delivered, check the carton carefully for signs of rough handling. If your 3100BX-EH is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing lists and carrier's receipt until the inspector has verified your claim.

EDIC's liability ceases when the carrier picks up the shipment. However, our customer service staff will be happy to furnish any information needed in connection with the claim and will attempt to expedite a resolution.



## PLEASE READ BEFORE OPERATING YOUR NEW 3100BX-EH:

Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of the machine. Keep this manual handy at all times.

This equipment has been engineered and manufactured to provide excellent performance and service. To ensure that your equipment will continue to perform as intended:

- Maintain equipment regularly- following the suggested maintenance schedule provided.
- Use only original EDIC parts when servicing.
- Operate equipment with care.

If additional information is needed, please contact: **EDIC** 

800-338-3342

All information and specifications printed in the manual are current at the time of printing; however because of EDIC's policy of continual product development, we reserve the right to make changes at any time without notice.

#### FAILURE TO COMPLY WITH THE FOL-LOWING WARNINGS AND INSTRUCTIONS WILL VOID THE WARRANTY.

#### **WARNING!**

- The machine was designed for use on carpet cleaning applications as per instructions and recommendations written in this manual. Any deviation from its proper use or purpose and the consequential damage that may occur is the sole responsibility of the end user.
- Disconnect the power cord from the outlet before servicing. Do not leave machine connected to an electrical outlet when unattended.
- Do not immerse or use this machine in standing water. Such use may cause electric shock.
- When using an extension cord, use only a 3-prong conductor grounding cord-12 gauge wire or heavier.
- To avoid electric shock, do not expose the unit to rain or snow. Store it indoors in a heated location only.
- Do not use the machine for dry vacuuming.
- Use defoamer at all times to prevent damage to the vacuum motor.
- Do not use water in excess of 130°F (54°C) in the solution tank
- To prevent seal damage and chemical build-up to the pump system, run clean water through the solution lines after each day's use.
- Use only commercially available carpet cleaning solutions and defoamer intended for use with machines of this type. Do not use dyes, bleaches, ammonia, or other additives.
- The use of powdered cleaning solution, if not diluted properly, may result in damage to the pump. Powdered chemical is not recommended. If powdered chemicals are used, premix in a separate container before placing in the solution tank.
- Always read and understand your chemical's MSDS (Material Safety Data Sheet) before use.
- This equipment is not designed to handle or use combustible/volatile substances such as gasoline or kerosene, in, on, or near the machine. The use of such materials will cause extreme hazardous condition.
- Do not expose machine to freezing temperatures.



- All repairs must be done by an authorized EDIC repair station.
- Do not use replacement parts other than original EDIC parts.
- Do not allow your spray stream to remain in one fixed location as surface damage may occur.
- Check that all spray nozzles are securely fastened. Loose nozzles could be ejected from equipment at high speeds.
- This is not a toy. Keep away from children.
- Do not pull by the power or use power cord as a handle. Always unplug by grabbing the plug and pulling, do not unplug by pulling the power cord.
- Inspect cord for damage. Do not use damaged cords. Connect only to properly grounded outlets.
- Keep hair, fingers, loose clothing, and body parts away from moving parts and openings.
- Turn off all controls before disconnecting machine
- Use caution with ejected liquid or chemicals. High pressures and temperatures could be hazardous to nearby people or surroundings.
- Do not run the heater dry. always make sure you have water
- Do not expose heater to freezing temperatures.
- Prevent burns by wearing gloves or using a barrier to remove hot quick disconnects.
- Never leave heater or equipment unattended when connected or powered on.
- The accessory heater was designed for use on 3100BX-EH extractors for carpet, floor and upholstery extraction applications. Any deviation from its proper use or purpose and the consequential damage that may occur is the sole responsibility of the end user.



#### **ELECTRICAL - 115 Volt**

Model: 3100BX-EH

This machine is designed to operate on a standard 15 amp, 120 volt, 60 Hz, AC circuit. Voltages below 105 volt AC or above 125 volts AC could cause serious damage to the motor.

## GROUNDING INSTRUCTIONS FOR 115VOLT:


This piece of equipment must be grounded. Should an electrical malfunction occur, grounding provides a path of least resistance for electrical current- reducing the risk of electric shock. This piece of equipment is furnished with a cord that has a grounding conductor and grounding plug. The grounded plug must only be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

#### **WARNING:**

Connecting the equipment to an improperly grounded outlet can result in an increased risk of electric shock. A qualified electrician should be consulted if you are unsure that the outlet is properly grounded. Do not modify the plug provided with the equipment. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is designed for use on a 120-volt circuit. The grounding plug provided looks like the plug illustrated in Figure 1. Replace the power cord if the grounding pin is damaged or broken.

Extension cords connected to this machine should be 12 gauge, three-wire cords with three-prong plugs and outlets. DO NOT use extension cords more than 25 feet (7.6 m) long.

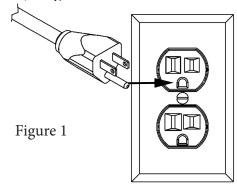



#### **MAINTENANCE:**

This 3100BX-EH has been engineered and built to require minimum maintenance. But like any machine, it does require some care to keep it in optimum working condition. Careful attention to these maintenance instructions will give you maximum operating performance and life expectancy of the machine.

#### CAUTION: Disconnect the power cord from the outlet before doing any clean up or maintenance on the machine

- 1. Keep the machine clean. Do not allow dust to accumulate on external surfaces or near any moving parts.
- 2. After every job, wipe down the surface of the machine with a clean damp cloth.
- 3. Inspect cord for damage. Do not use machine with a damaged cord.

#### PERIODIC MAINTENANCE

- Use only chemicals safe for extractors
- Adhere to the appropriate mix ratios for all chemicals
- For optimal performance, it is suggested that the operator flush the system after every job or at the end of the day.
- Pump seals and valves may need to be replaced at the 1000 hour mark if a loss in pressure is noted

#### Daily:

- 1. Always keep the machine clean inside and out.
- 2. Pour 2 gallons of clean hot water in the solution tank. Turn the pump on and flush the entire system through the wand nozzles for about a minute to prevent alkaline build-up.
- Remove dirt and lint build-up inside the filter screen in the recovery tank. Lint should be cleaned off so that air flow is not impeded.
- 4. Check the solution tank strainer in the solution tank. If lint has accumulated in the screen, remove and rinse it in clear running water.

#### Weekly:

- Check and clean solution filter
- Check for obstructions in vacuum pathways
- Quarterly:
- Check pump, plumbing and fittings for leaks
- Check power cords and hoses for tears

#### **CORD STORAGE:**

While not in use, storage can be accomplished by winding cord around handle assy. Cord should be completely unwound during operation.

#### **CORD SAFETY**


- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return to service center for inspection and repair.
- Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not run this 3100BX-EH over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- This equipment should be stored indoors and not exposed to rain.



## 3100BX-EH MACHINE OVERVIEW

- 1. Handle- Used to maneuver and position the 3100BX-EH. Contains switch box (for switchbox, see #12).
- 2. Recovery tank and lid- Tank collects recovered waste water. Lid allows access to recovery tank and creates a seal to ensure suction.
- 3. Solution tank and lid- Tank used to store clean water or solution for your job. Lid allows access to the solution tank and prevents external contamination of solution tank.
- 4. Non-marking front 4" locking casters and rear 10" wheels.
- 5. Recovery/vacuum hose inlet barb- connect your recovery vacuum hose to this barb.


- 6. Solution line Q.D.- Pressurized connection for solution line.
- 7. Male twist lock pigtail- Connects to 50ft power cord.
- 8. Female twist lock port for heater.
- 9. Cool air intake for vacuum.
- 10. Recovery tank dump valve- Pull up to open.
- 11. Heater mounting brackets.
- 12. Switch box- one switch marked "VACUUM" and one switch marked "PUMP". Switches light up when powered on.
- 13. 602HR 1000 Watt Heater.

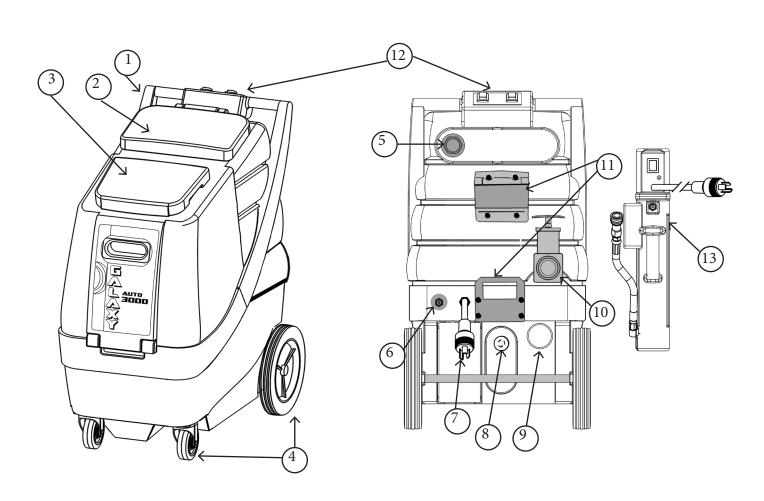



## 602HR HEATER OVERVIEW

- 1. INLET QUICK DISCONNECT AND HOSE- Connects to machine's outlet.
- 2. POWER SWITCH.
- 3. LAMP- Indicates when heat element is on and working.
- 4. TWIST LOCK POWER CORD- This connects to the female twistlock plug on the rear of the 3100BX-EH (#8 ON PAGE 6).
- 5. OUTLET QUICK DISCONNECT- Connects to working solution line.
- 6. HANDLE- Used to hold and transport the heater
- 7. MOUNTING FEET- Used to engage the mounting brackets on an 3100BX-EH extractor and secure the heater.
- 8. HIGH TEMP BREAKER ACCESS POINT- Allows access to the breaker switch in the event the unit has been run dry.

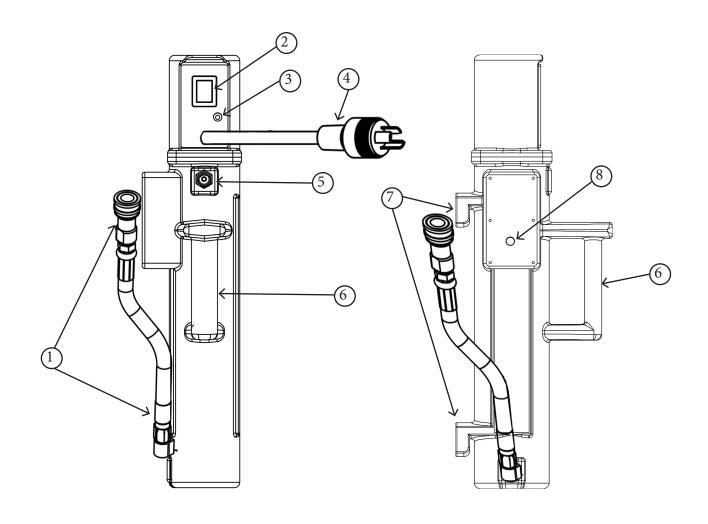



#### How to use the 602HR heater:

- 1. Fill the solution tank of your 3100BX-EH extractor with sufficient water or solution for the task at hand. Do not use water over 130 degrees F.
- 2. Mount the Heater by lining up the two "legs" (#7 on page 7) to the two mounting brackets on the rear of the machine (#11 on page 6).



3. Connect your heater's inlet hose (#1 on page 7) to the machine's outlet quick disconnect (#6 on page 6).



4. Connect the power cord on the heater (#4 on page 7) to the female twist-lock plug on the machine (#8 on page 6.)



5. Connect your 15ft solution hose to #5 on page 7



- 6. Connect your 15ft vacuum hose to the extractor's vacuum inlet barb (#5 on page 6)
- 7. Connect your vacuum and solution line to a carpet wand or Upholstery attachment
- 8. Connect your 50FT power cord to the twist lock pigtail on the back of the machine (#7 on page 6). Plug the cord into a 15amp circuit.
- 9. Turn the pump switch to the "ON" position using the pump switch on the handle of your 3100BX-EH. DO NOT turn on your heater until after this step is completed. Pressing the solution valve trigger of your attachment, spray water for 10-15 seconds until you have a steady flow. This ensures the heater is filled with fluid
- 10. Turn heater on using the power switch (#2 on page 7) and allow up to 3 minutes for the unit to heat up.
- 11. The heater is ready for use once the green lamp (#3 on page 7) shuts off. Once you start cleaning, the green lamp will turn on and off throughout your job as the thermostats automatically regulate the temperature.



#### **CLEANING UPHOLSTERY:**

Cleaning upholstery with success requires a good knowledge of the type of fabric to be worked on. Look for the cleaning instruction label sewn on the underside of the furniture for the recommended method of cleaning the fabric. If it calls for dry cleaning, do not attempt to clean with the wet extraction method. Otherwise, damage to the fabric could occur. Extraction works perfectly on most synthetic fabrics including synthetic velvets.

Before proceeding, test the fabric for colourfastness. Apply a small amount of ready-to-use cleaning solution on the fabric in an inconspicuous spot. Wait for 2 to 3 minutes and rub the area with a white terry cloth towel. If no color comes off the towel, the fabric should be safe to clean. If a little color comes off, there is some risk of colors running when you clean. It may be possible to stabilise colors by cleaning with an acidic rinse.

- 1. Using a dedicated dry vacuum, pre-vacuum the space to be cleaned to remove as much dirt as possible. Do not use the extractor to dry vacuum as it does not have a dry filter.
- 2. See steps 1-11 in section "How to use an accessory heater"
- 3. Make sure the drain valve (#10 on page 6) is closed by pushing the T-handle all the way in.
- 4. Attach an upholstery tool to the hose set.
- Always use de-foamer. Previously cleaned upholstery may have a heavy build-up of old shampoo residue which can cause the vacuum system to ingest foam and result in damage to the vacuum motor.
- 6. With the vacuum and pump switches in the "ON" position, slowly pull the tool backward with the solution valve trigger pressed. Make a dry pass forward and backward over the cleaned area to recover residual dirt and solution.
- 7. Clean using as little solution as possible. Do not overwet the upholstery! Make overlapping passes to prevent streaking.
- 8. On heavily soiled areas like arm rests, pre-treat with a recommended pre-spray and /or hold the upholstery tool a few inches above the fabric and press lever to spray on the solution before making a pass.
- 9. When you are close to running out of solution, turn

- off the pump and the heater. Attach the drain elbow on the drain valve. Place a pail under the downspout and pull up the drain valve T-handle. Dirty solution will pour out until the tank is empty. Close the drain valve. Use a clean bucket when you refill the solution tank so you do not create contamination.
- 10. When the job is completed, turn the switches off, including the heater, and disconnect the vacuum and solution hoses from the carpet tool and the machine. Drain the recovery tank through the drain valve as before
- 11. Clean machine inside and out before storing.

#### **CLEANING CARPET**

- 1. Using a dedicated dry vacuum, pre-vacuum the space to be cleaned to remove as much dirt as possible. Do not use the extractor to dry vacuum as it does not have a dry filter.
- 2. Pre-spray the carpet
- 3. See steps 1-11 in section "How to use an accessory heater"
- 4. Make sure the drain valve (#10 on page 6) is closed by pushing the T-handle all the way in.
- 5. Always use de-foamer- Previously shampooed carpets may have a heavy build-up of old shampoo residue which can cause the vacuum system to ingest foam and result in damage to the vacuum motor.
- 6. With the vacuum and pump switches in the "ON" position, slowly pull the tool towards you with the solution valve trigger pressed. Make a dry pass forward and backward over the cleaned area to recover residual dirt and solution.
- 7. Do not overwet carpet! Make overlapping passes to prevent streaking.
- 8. If the carpet is heavily soiled, squeeze solution valve trigger on the forward pass as well as backwards, allowing cleaning solution a few seconds longer to work prior to vacuuming. Another method is to raise the wand 8" above the carpet and pre-spray lightly prior to cleaning passes. On extremely soiled carpets, we recommend using a pre-spray solution.

Refer to steps 9, 10 and 11 of previous section for final shutting down and emptying procedures.



CI	EC	TTD	IC	ΛT	CV	STEN	1
		, I K		AL	31	3 I E/I	/1

PROBLEM	SOLUTION	
NO ELECTRICAL POWER	1. Defective power cord.	
	2. House or building circuit breaker tripped	
POWER IS INTERMITTENT TO ONE OR ALL MO-	1. Faulty electrical cable.	
TORS	2. Defective switches.	
	3. Loose terminal or discolored terminal connections.	


#### **VACUUM SYSTEM**

PROBLEM	SOLUTION	
NO VACUUM SUCTION	1. Drain Valve open.	
	2. Vacuum lid is not sealed against tank.	
	3. Loose vacuum hose, vacuum connection	
LOW VACUUM SUCTION	1. Accumulated dirt on intake filter screen.	
	2. Worn out vacuum lid gasket.	
	3. Lint & dirt build-up on wand head.	
	4. Defective vacuum hose.	
	5. Loose connection in the vacuum motor.	


#### **SOLUTION SYSTEM**

PROBLEM	SOLUTION
PUMP MOTOR RUNS BUT NO SPRAY THROUGH	1. Clogged spray tips.
SPRAY TIPS	2. Clogged solution intake filter screen.
	3. Clogged female quick disconnect coupler.
	4. Quick disconnects not fully connected
	5. Dirty or damaged pump head valves.
	6. Defective pump check valve.
	7. Crack in pump housing.
	8. Lost Prime.
UNEVEN OR WEAK SPRAY FOR SPRAY TIPS	1. Clogged or dirty spray tips.
	2. Accumulated dirt on solution intake filter screen.
	3. Accumulation of debris inside pump and plumbing.
	4. Worn pump bearing (excessive noise).
	5. Punctured pump diaphragm.
	6. Defective rectifier or motor.
	7. Worn nozzles.
ERRATIC PRESSURE	1. Pump check valves defective or dirty
	2. Lost prime.



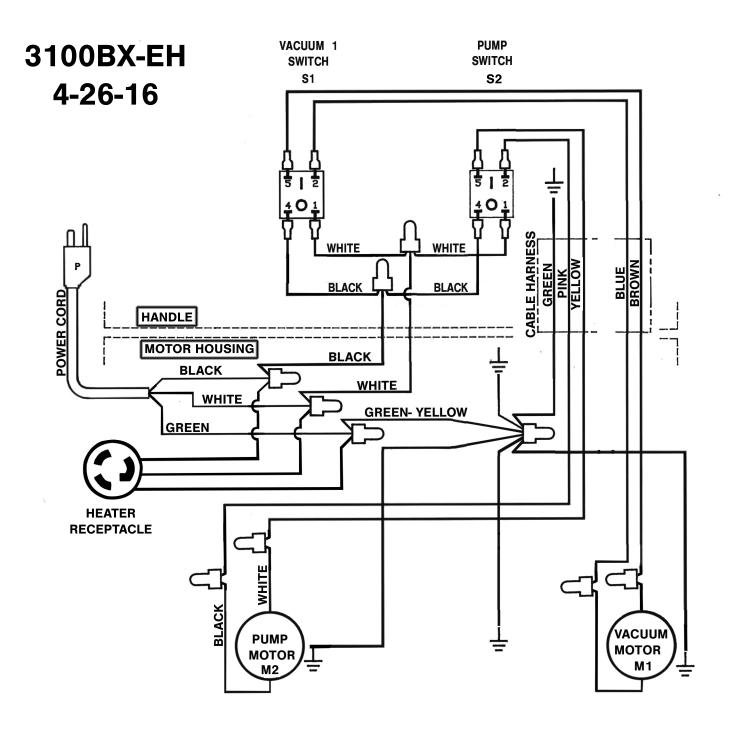



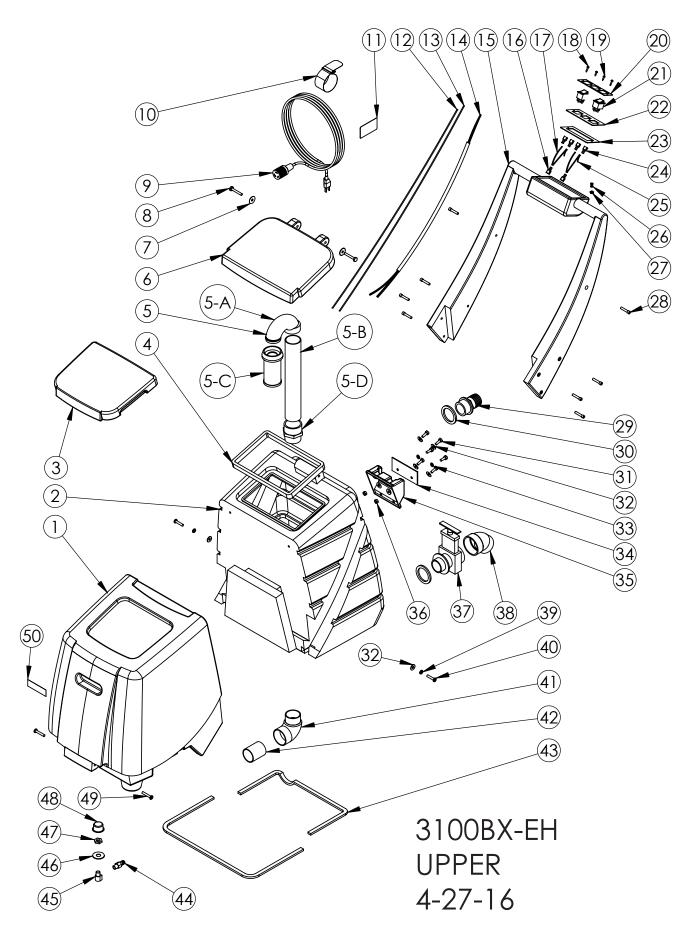




### 3100BX-EH UPPER 4-27-16

1       F11794 Solution Tank         2       F11788 Recovery Tank         3       F11791 Lid, Solution Tank         4       E11124 Gasket, Recovery Tank         5       12904A Stand Pipe Assembly         A       K11965 Elbow, 180 Deg. Float Ball         B       K00672 Pvc Pipe, 1.5 X 12 in, Sch 40 Wht         C       10989-2A Float Ball Screen         D       K00741 Adapter         6       F11785 Lid, Recovery Tank         7       C12039 Washer, 1-4 X 1, SS         8       C02322 1-4 X 20 Bolt         9       B11769 Extension Cord, 12-3 SJTW         10       C11177 Velcro Strap         11       H02548-2 Label, Important, Cord         12       B00185-30 Wires, 73 in         13       B00185-40 Wires, 73 in         14       B010314 Wire Harness         15       F11786 Handle         16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire, 14 GA Black, UL1015, 5 in         18       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B0211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         2	
3 F11791 Lid, Solution Tank 4 E11124 Gasket, Recovery Tank 5 12904A Stand Pipe Assembly A K11965 Elbow, 180 Deg. Float Ball B K00672 Pvc Pipe, 1,5 X 12 in, Sch 40 Wht C 10989-2A Float Ball Screen D K00741 Adapter 6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E01045-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
4 E11124 Gasket, Recovery Tank 5 12904A Stand Pipe Assembly A K11965 Elbow, 180 Deg. Float Ball B K00672 Pvc Pipe, 1.5 X 12 in, Sch 40 Wht C 10989-2A Float Ball Screen D K00741 Adapter 6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B01031 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
5       12904A Stand Pipe Assembly         A       K11965 Elbow, 180 Deg. Float Ball         B       K00672 Pvc Pipe, 1.5 X 12 in, Sch 40 Wht         C       10989-2A Float Ball Screen         D       K00741 Adapter         6       F11785 Lid, Recovery Tank         7       C12039 Washer, 1-4 X 1, SS         8       C02322 1-4 X 20 Bolf         9       B11769 Extension Cord, 12-3 SJTW         10       C11177 Velcro Strap         11       H02548-2 Label, Important, Cord         12       B00185-30 Wires, 73 in         13       B00185-40 Wires, 73 in         14       B010314 Wire Harness         15       F11786 Handle         16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire, 14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
A K11965 Elbow, 180 Deg. Float Ball B K00672 Pvc Pipe, 1.5 X 12 in, Sch 40 Wht C 10989-2A Float Ball Screen D K00741 Adapter 6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
B K00672 Pvc Pipe, 1.5 X 12 in, Sch 40 Wht C 10989-2A Float Ball Screen D K00741 Adapter 6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-30 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire,14 GA White, UL1015, 5 in	2 2 1 1 1
B K00672 Pvc Pipe, 1.5 X 12 in, Sch 40 Wht C 10989-2A Float Ball Screen D K00741 Adapter 6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-30 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire,14 GA White, UL1015, 5 in	2 2 1 1 1
C 10989-2A Float Ball Screen D K00741 Adapter  6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
D K00741 Adapter 6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
6 F11785 Lid, Recovery Tank 7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
7 C12039 Washer, 1-4 X 1, SS 8 C02322 1-4 X 20 Bolt 9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	2 2 1 1 1
8	2 1 1 1
9 B11769 Extension Cord, 12-3 SJTW 10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire,14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire,14 GA White, UL1015, 5 in	1 1
10 C11177 Velcro Strap 11 H02548-2 Label, Important, Cord 12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	
11       H02548-2 Label, Important, Cord         12       B00185-30 Wires, 73 in         13       B00185-40 Wires, 73 in         14       B010314 Wire Harness         15       F11786 Handle         16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire, 14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	
12 B00185-30 Wires, 73 in 13 B00185-40 Wires, 73 in 14 B010314 Wire Harness 15 F11786 Handle 16 B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated 17 B00185-40 Wire, 14 GA Black, UL1015, 5 in 18 C00295-1 #10 X .75in Pan, Black SMS, Phillips 19 C00293 #8 X .5in Pan, Black SMS, Phillips 20 D03421 Cover, Switchplate, Galaxy 21 B02211-1 Switch, Rocker, Green Light 22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire,14 GA White, UL1015, 5 in	
13       B00185-40 Wires, 73 in         14       B010314 Wire Harness         15       F11786 Handle         16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire, 14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	1 1
14       B010314 Wire Harness         15       F11786 Handle         16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire,14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire,14 GA White, UL1015, 5 in	1
15       F11786 Handle         16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire,14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire,14 GA White, UL1015, 5 in	1 1 1
16       B00177 Terminal Lug, Female, QD, .25 X .032, 16-14 AWG, Fully Insulated         17       B00185-40 Wire,14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	1
17       B00185-40 Wire, 14 GA Black, UL1015, 5 in         18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	2
18       C00295-1 #10 X .75in Pan, Black SMS, Phillips         19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	
19       C00293 #8 X .5in Pan, Black SMS, Phillips         20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	1 2
20       D03421 Cover, Switchplate, Galaxy         21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	
21       B02211-1 Switch, Rocker, Green Light         22       D010284 Switchplate         23       E010453 Gasket, Switch Bracket         24       B00177-1 Terminal Lug, Female, QD, .25 X .032         25       B00185-30 Wire, 14 GA White, UL1015, 5 in	2
22 D010284 Switchplate 23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	1
23 E010453 Gasket, Switch Bracket 24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire, 14 GA White, UL1015, 5 in	3
24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire,14 GA White, UL1015, 5 in	1
24 B00177-1 Terminal Lug, Female, QD, .25 X .032 25 B00185-30 Wire,14 GA White, UL1015, 5 in	1
25 B00185-30 Wire,14 GA White, UL1015, 5 in	4
	+ 1
T. 70. D. 407.01.01.00.890.00.00. # 10.101. 00. 00	2
27 C00264 Nut, 10-32	1
28 C11141 Screw, Allen Head, 10-24 X 1.25 in	8
29 K00665-1 Hose Adapter, 1.5in, Black	1
30 E11128 Gasket, Drain Valve	2
31 C00313 Hex Bolt, .25 X 20 X .75	6
32 C00233 Washer, Flat, .25 in	8
33 C02312 Lockwasher, .25 in., Internal Star	2
34 D010283 Plate, Heater Mounting	1
35 F11804 Heater Mount	1
36 C00261 Nut, .25-20, Hex	2
37 K00711 Drain Valve, Black	1
38 K00710 Elbow, Drain Valve, Black	1
39 C00254 Lock Washer, 1-4in Split	2
40 C02294 Screw, 1-4 20 X 1.25	2
41 K11185 Elbow, 90, 1.5 in, MT-MS, PVC	1
42 K00672-1 Pvc Pipe, 1.5 X 2.25 in, Sch 40 Wht	1
43 E11129 Gasket, Base	1
44 A00060 3-8 Barb X 1-4MP, Brass	1
45 A00052 .25 X .375 M-F 90 deg Brass	1
46 C11244 Washer, .56 X 1.5 X .05	1
47 A00124 Hex Nut, .25 NPT Brass	1
48 D00373 Inlet Filter, .25 NPT	1
49 C11143 Screw, 1-4 20 X 1.5 in, SS Pan Head, Phillips	
50 S11179 Non-Skid Tape, 1 in. Roll	2



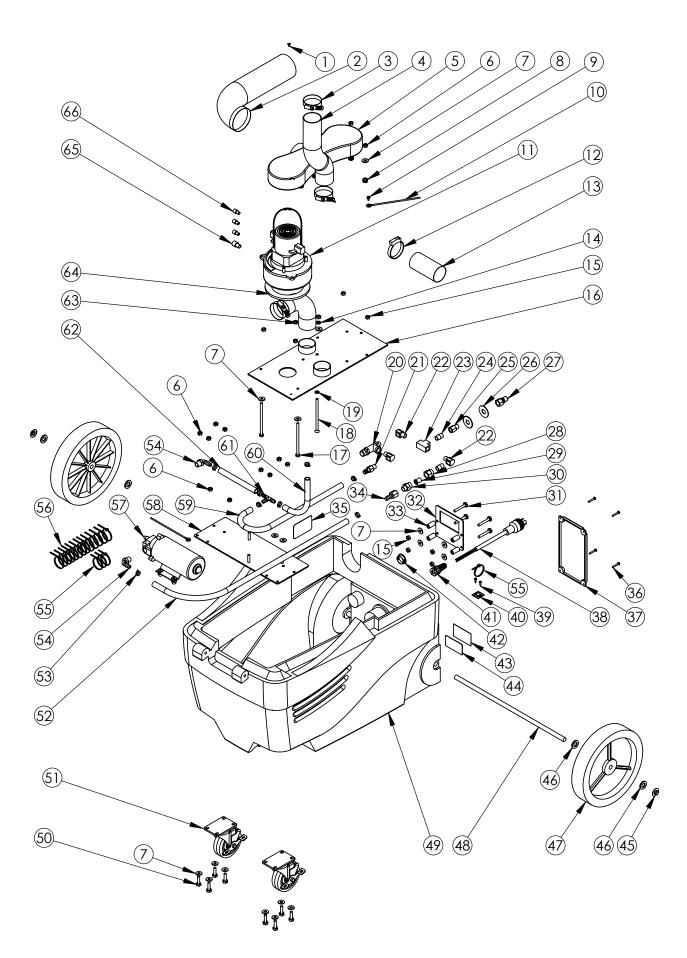



ITEM	DADTAHIAADED	DESCRIPTION	QTY.
NO.	PART NUMBER	DESCRIPTION	Q11.
2	C00297 Screw,#8 X .25 in, Pan Head J11863 Hose, 3 in		1
3	J00639 Screw Clamp, 1.63 - 2.43in.		3
4	J00618 Vacuum Hose, 2in Grey, Wire, 22 in Ig		ī
5	F11178-BLK Intercooler, Galaxy, Black		1
6	C00273 Locknut, 1-4 X 20, Nylon, SS		16
7	C00233 Washer, Flat, .25 in		26
8	E00449 Grommet C00284 Screw, 10-32 X .375 Ground		2
9	B11150 Ground Wire, Galaxy		2
11	G00537 Vacuum Motor, 82 in, 115 V		2
12	J00657 Hose Clamp, 2 inSLDPRT		1
13	J00618 Vacuum Hose, 2 in Grey, Wire, 4 in Ig		1
14	C00254 Lock Washer, 1-4in Split		1
	C00261 Nut, .25-20, Hex		10
16	D11134 Vac Plate		5
17	C11189 Screw, 1-4 X 20 X 4.5 in, Hex C11516 Screw, 1-4 X 20 X 4.5 in, Flat Head, Phillips		1
19	C02312 Lockwasher, .25 in., Internal Star		i
20	G11314 Pressure Regulator, Brass		i
21	A00060 3-8 Barb X 1-4MP, Brass		1
22	A00052 .25 X .375 M-F 90 deg Brass		3
23	A00161 Tee, .25 FP, Brass		1
24 25	A00111 Nipple, .25 in		2
26	A00121 Fifting, .25 MP X .25 FP, Brass C11244 Washer, .5 ID X 1,5 OD		2
27	A00104 QD, 1-4 M X 1-4 FP, Brass		1
28	A00097A Cap, Inline Filter		t i
29	A00094E Checkvalve, No Strainer		1
30	A00094C Check Valve Body		1
31	C02322 Hex Bolt,1-4 X 20 X 1.75 in		4
32	D010379 Heater Mounting Plate		1
33	C11440 Spacer, Heater Mounting Plate A00061 3-8 Barb X 1-4FP, Brass		4
35	H02564-2 Label, Caution, Motor Housing		<del>                                     </del>
	C11165, Screw, #8 X 1 in, Pan, Black		4
37	F11790 Heater, Tunnel Cover, Blue Granite		1
38	B11779 Stub, 12-3 SJTW Yellow		1
	C00293 #8 X .5in Pan, Black SMS, Phillips		2
	B00192 Mount, Nylon Tie B11606 Strain Relief, Pigtail		
41	K10510 Plug, 1.25 in, Black		1 1
	H03545 Cover, Serial # Label		1
	H00565-5 Label, Serial Number		1
45	C02305 Cap Nut, .5in Push-on		2
46	C00240 Washer, Shoulder, Nylon		4
47	G11767 Wheel, 10 in		2
48	D11170 Axle		1
49	F11789 Base		
50 51	C00314-1 Hex Bolt, 1-4 X 20 X 1in G03518 Caster, 4 in		8 2
52	J00613B Solution Hose, .375 in, Black		1
53	J11508Screw Clamp #6, 7-16 to 7-8in		8
54	A00054 Elbow, 90, .375MP X .375B, Nylon		2
55	B00191 Nylon Tie, 11in Black		4
56	B00190 Nylon Tie, 4in		13
57	G00513-100 Pump, 100 PSI, 115 V		1
58 59	D11194 Pump Plate J00613B Solution Hose, .375 X 26 in, Black		1
60	J11154 Solution Hose, .375 X 10 in, Wire Reinforced		1
61	A11243 Tee, .375B X .375B X .375B, Nylon		1
62	J11154 Solution Hose, .375 X 6 in, Wire Reinforced		1
63	J00618 Vacuum Hose, 2 in Grey, Wire, 7 in Ig		1
	E11169 Gasket, Vac Motor, Galaxy		2
	B00179-2 Closed End Cntr, 16-3		1
66	B00179-1 Closed End Cntr, 16-3		3



To register your product warranty, visit our website at:

#### www.edic-usa.com/warranty-registration/

#### EDIC STANDARD LIMITED WARRANTY PLAN FOR MACHINES MANUFACTURED AFTER 2/14/2017

The following Limited 5-year Warranty is given by EDIC with respect to the following specific EDIC products:

Polaris	Aviator	Saturn Low Speed	Aqua Dri
Galaxy 5	Fivestar	Saturn Dual Speed	CR2 Restroom Cleaner
Endeavor	Galaxy	Saturn HD Low Speed	
Heat N Run	Bravo	Atlas	
Saturn High Speed	Supernova	Galaxy Pro	

The following Warranty is given by EDIC with respect to the following specific EDIC products:

2 Years Parts & Labor	TORO HD Orbital	TORO Orbital
FloodBuster	1725-TES has a 4-year	1725-TPT has a 2-year
Dynamo Vacuums	parts warranty and a	parts warranty and a
Pilot Autoscrubber	2-year labor warranty	1-year labor warranty
Galaxy Automotive		
Extractors		

**LIFETIME** on rotationally molded polyethylene tanks, stainless steel heater tank and Saturn stainless steel brush covers.

**5 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

**2 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

#### **EDIC REPLACEMENT PARTS LIMITED WARRANTY PLAN**

All parts sold as replacement parts for out-of-warranty EDIC products have the following Limited Warranty, with no warranty on labor: **30 DAYS** 

Your product is warranted to be free of defects in material and workmanship for the period set forth above, after the date of delivery to the retail purchaser, when operated in normal service and used in accordance with the operating and maintenance instructions in the Owner's Manual. This warranty is limited to and provides at no cost to the retail purchaser repair or replacement of parts determined to be defective, at EDIC's option, and labor, if provided for above, to replace or repair the parts ("service labor") according to EDIC's Standard Rates, during the warranty period set forth above. This warranty excludes transportation charges unless authorized in writing by EDIC. No warranty returns for refund or credit will be permitted. In the event of a defect, these are your exclusive remedies. Warranty claims must be made in writing to EDIC prior to returning the product and no products will be accepted for repair or replacement without prior authorization by EDIC. Use of parts not approved by EDIC in EDIC products will void this warranty. Warranty repair or replacement shall not extend the original warranty period of the product, and replacement parts used for in-



warranty repairs will only be warranted for the remainder of the original warranty and not from their installation date. Any parts or product replaced under this Limited Warranty will become the property of EDIC.

**EXCEPTIONS AND EXCLUSIONS FROM THE WARRANTY.** This Limited Warranty only covers product issues caused by defects in material or workmanship during normal service. It does not cover product issues from any other cause, including but not limited to (a) transportation damages; (b) alteration by unauthorized persons; (c) unauthorized use, unreasonable use, misuse, or abuse (including the use of incompatible or corrosive chemicals or overloading of capacity); (d) failure caused by lack of proper maintenance and cleaning; (e) normal wear on items such as cords, belts, hoses, switches, bumpers, gaskets, seals, carbon brushes, squeegees, harnesses, valves, cams, extraction brushes, bearings, handle grips, filters and finishes; (f) acts of God; or (g) modification of or any part of the product. This Limited Warranty does not cover EDIC products sold AS IS and WITH ALL FAULTS. This Limited Warranty is valid only in the United States and Canada.

We suggest that you complete and return the enclosed product registration card promptly to facilitate verification of the date of the original purchase. However, return of the product registration card does not eliminate the need for the retail purchaser to maintain the original proof of the purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

For specific information on how to obtain warranty services for your product, please write to:

EDIC/Warranty Department

1753 Blake Ave.

Los Angeles, CA 90031

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THIS STATEMENT. THERE IS NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY USE ON THESE GOODS.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND EDIC. EDIC SHALL NOT BE LIABLE FOR ANY FORM OF ACTION FOR ANY DAMAGES, WHETHER DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT, TO PROPERTY OR PERSON, INCLUDING BUT NOT LIMITED TO, DAMAGE OR LOSS OF INCOME, LOSS OF PRODUCTION, OR LOSS OF PROFITS DUE TO MALFUNCTIONING OF ANY PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST EDIC BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY EDIC, AND CAUSING

THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL THE RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED DIRECTLY BY NEGLIGENCE OF EDIC. THIS LIMITED WARRANTY STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state (or province).

0900.002/9989